


EPROM Replacement - FMU-2000 & AFSS VIR

CAUTION This procedure should NOT be attempted in a rainy environment!

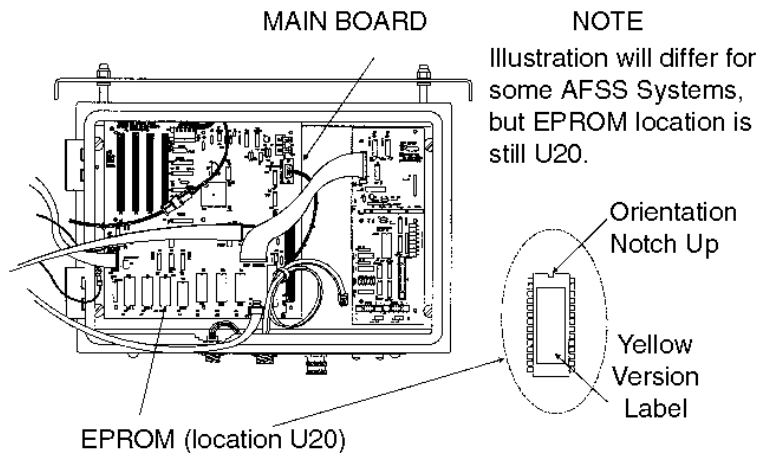

1. Download transactions (not QUERY).
2. Turn off POWER.
3. Remove EPROM from location U20 (Note orientation notch to top).
4. Locate orientation notch on new EPROM.

NOTE Ensure that all pins are correctly aligned and not bent during the insertion process.

5. Carefully insert the new EPROM.
6. Restore power.
7. Download transactions (not QUERY) to initialize new EPROM.

NOTE Failure to perform the download could result in loss of future transactions.

TIP If any questions arise, contact Syntech Systems, Inc.'s Customer Satisfaction Center (CSC) at 1-800-888-9136, ext. 2, or email support@myfuelmaster.com.