


Keypad Filter Installation FMU 2500/3000

CAUTION This procedure should NOT be attempted in a rainy environment!


Remove the Existing Keypad Decoder IC

NOTE Transactions (not QUERY) must be downloaded prior to removal of the keypad decoder IC.

1. Open the FMU pedestal door, and turn off the FMU Power Switch.
2. Open the FMU upper cabinet door, and locate the keypad decoder IC (Mainboard – socket U16 near the ribbon cable connector for keypad). See Figure below).

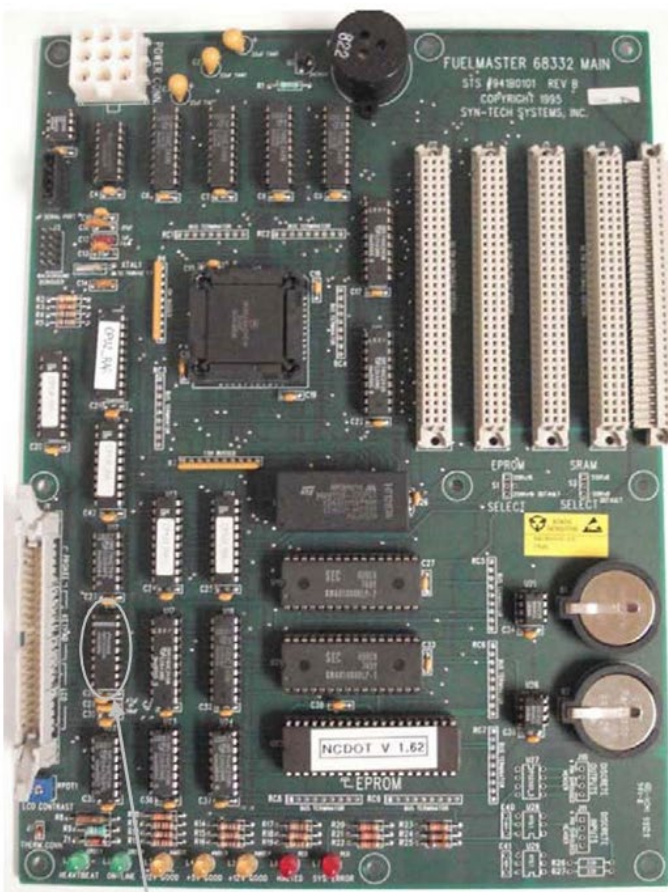

Keypad Decoder IC Location, U16

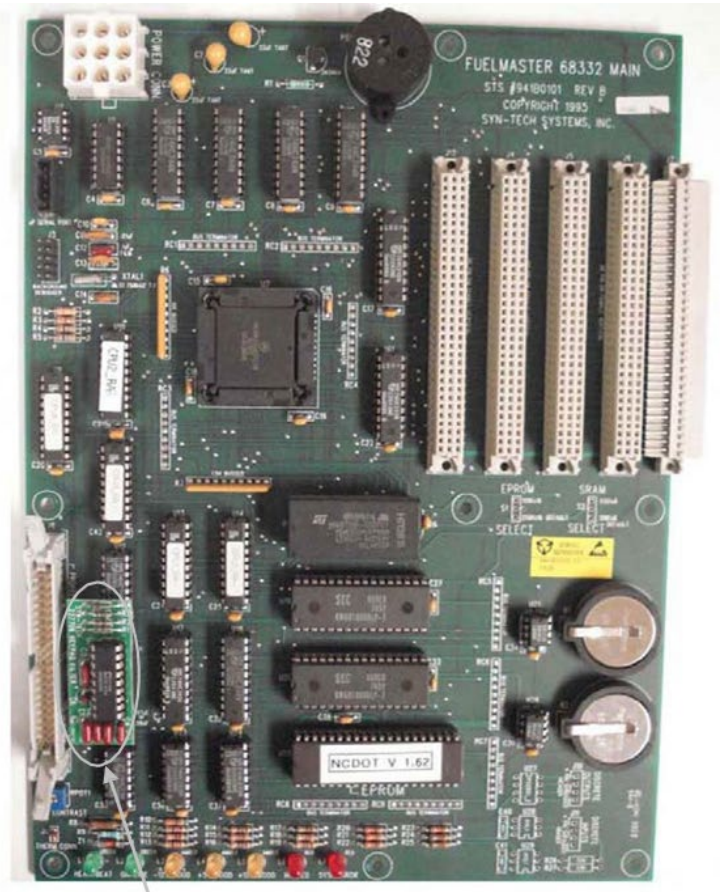


Keypad Filter Installed

3. Using a chip puller or small flat-bladed screwdriver, carefully remove the IC from the socket.

Installation to follow on the next page.

Install the Keypad Filter Board

1. With the notch up, carefully insert the Keypad Filter Board into the Keypad Decoder (socket U16).

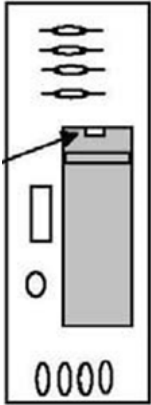

2. Restore power to the FMU. After the FMU has initialized, the display shall show:

FUELMASTER FUEL MANAGEMENT SYSTEM

INSERT KEY, HOLD 1 SECOND TO BEGIN

TIP

If any questions arise, contact Syntech Systems, Inc.'s Customer Satisfaction Center (CSC) at 1-800-888-9136, ext. 2, or email support@myfuelmaster.com.